

# HEAT PUMPS

## Air to water heat pumps

### Cooling and heating

Type	Capacity	Function	Refrigerant	Compressor	Fan	Heat exchanger
i-BX-N 004M - 035T	4,20 - 35,1 kW	Cooling/heating/DHW	HFC R-410A	Inverter driven Scroll	Axial	Plate
i-NX-N 0151P - 0502P	41,0 - 128 kW	Cooling/heating	HFC R-410A	Inverter driven Scroll	Axial	Plate
i-NX2-N-G07 0051-0112	51 - 220 kW	Cooling/heating/DHW	R32	Inverter Scroll	EC Axial	Plate
AWR-HT 0122 - 0302	34,0 - 91,7 kW	Cooling/heating/DHW	HFC R-407C	Scroll	Axial	Plate
AWR-HT 0404 - 0604	116 - 181 kW	Cooling/heating/DHW	HFC R-407C	Scroll	Axial	Plate
NECS-N 0202T - 0612T	48,0 - 151 kW	Cooling/heating	HFC R-410A	Scroll	Axial	Shell and tube
NECS-N 1314 - 2116	320 - 516 kW	Cooling/heating	HFC R-410A	Scroll	Axial	Shell and tube
NX-CN 0072 - 1104	18 - 265 kW	Cooling/heating	HFC R-410A	Scroll	Plug Fan	Plate
NX-N 0152P - 0812P	35,8 - 219 kW	Cooling/heating	HFC R-410A	Scroll	Axial	Plate
NX-N-G06 0202P - 0812P	44,9 - 211 kW	Cooling/heating	R454B	Scroll	Axial	Plate
NX-N 0604P - 1204P	148 - 319 kW	Cooling/heating	HFC R-410A	Scroll	Axial	Plate
NX-N-G06 0604P - 1204P	142 - 306 kW	Cooling/heating	R454B	Scroll	Axial	Plate
NX-N 0604T - 1204T	148 - 335 kW	Cooling/heating	HFC R-410A	Scroll	Axial	Shell and tube
NX-N-G06 0604T - 1204T	142 - 322 kW	Cooling/heating	R454B	Scroll	Axial	Shell and tube
FOCS-N 2022 - 2622	441 - 586 kW	Cooling/heating	HFC R-134a	Screw	Axial	Shell and tube
FOCS-N-G05 2022 - 2622	441 - 586 kW	Cooling/heating	HFC R-513A	Screw	Axial	Shell and tube
i-FX-N-G01 0472 - 1152	444 - 1154 kW	Cooling/heating	HFC R-134a	Screw	EC Axial	Shell and tube
i-FX-N-G05 0472 - 1152	444 - 1154 kW	Cooling/heating	HFC R-513A	Screw	EC Axial	Shell and tube
NX2-N-G06 0344 - 0808	316 - 799 kW	Cooling/heating	R454B	Scroll	Axial	Shell and tube

### Only heating

Type	Capacity	Function	Refrigerant	Compressor	Fan	Heat exchanger
AW-HT 0122 - 0302	38 - 102 kW	65 °C heating/DHW	HFC R-407C	Scroll	Axial	Plate
AW-HT 0404 - 0604	135 - 205 kW	65 °C heating/DHW	HFC R-407C	Scroll	Axial	Plate